


# HOW TO CONNECT OJ-AIR2 MASTER WITH OJ-AIR2-PWR

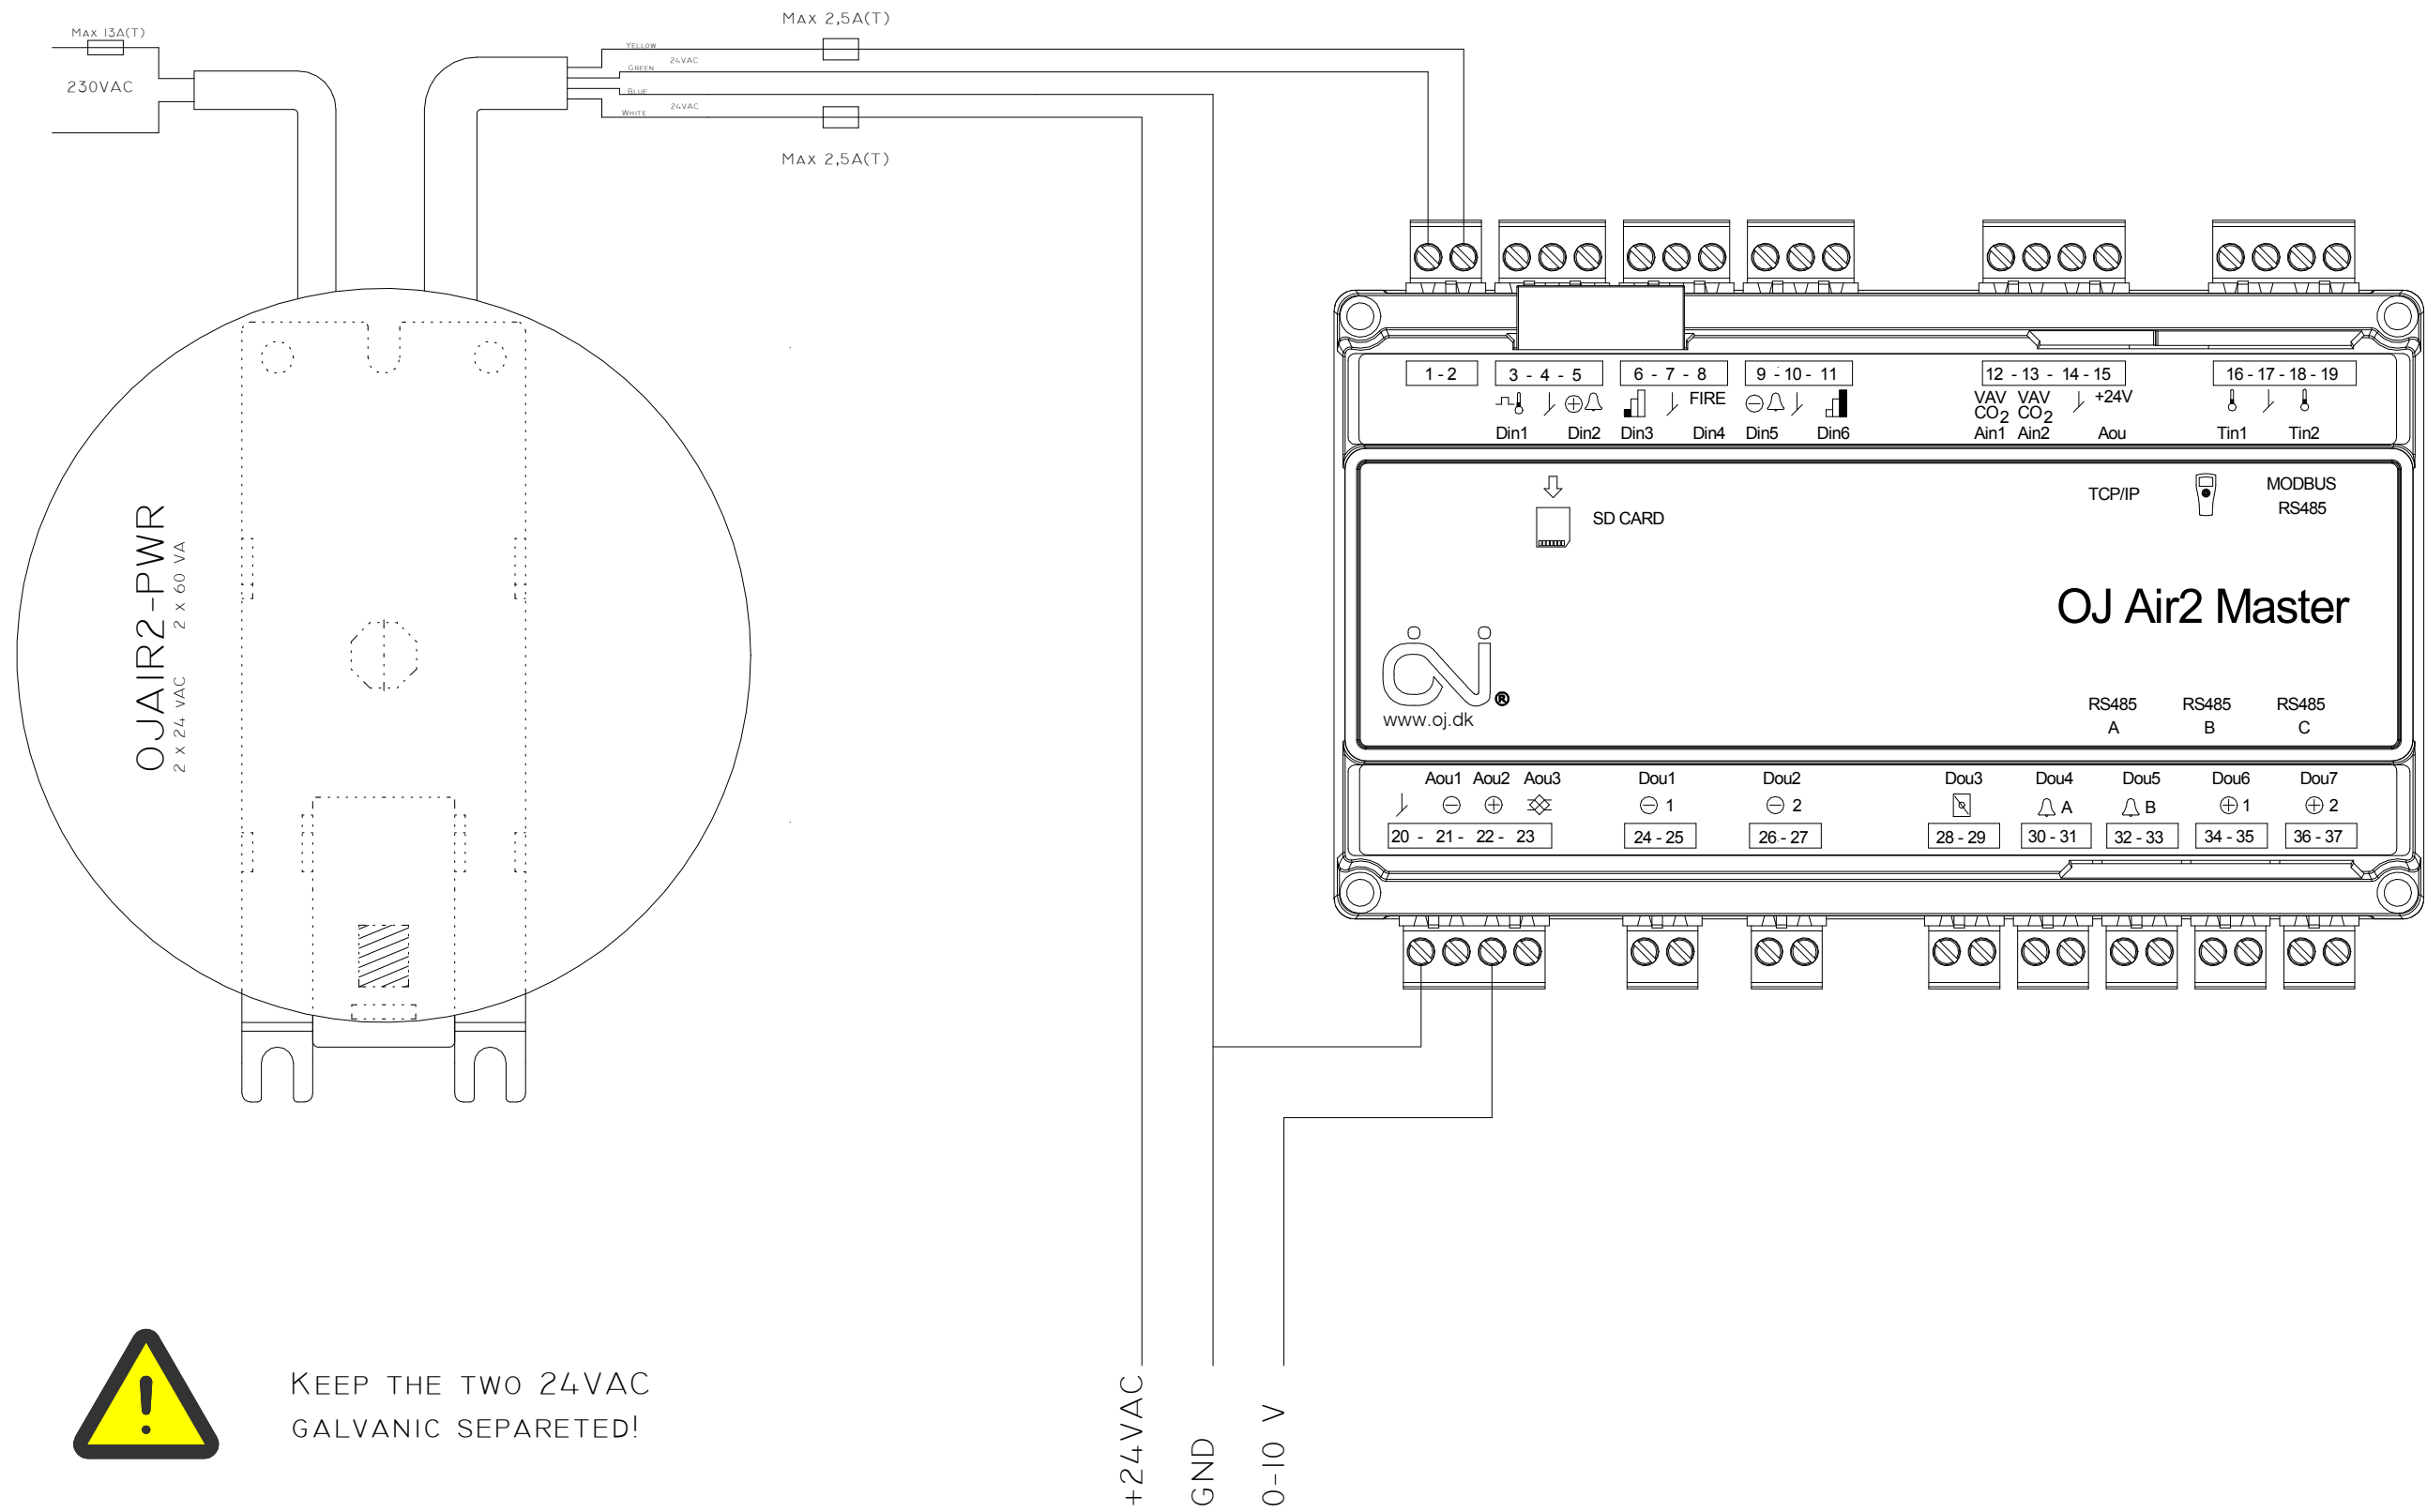

KEEP THE TWO 24VAC GALVANIC SEPARATED!