

## Room temperature transmitter



### TTH-6040-W

- Room temperature
- Wall-mounting
- Plug & Play with OJ Air2
- Plug & Play with OJ GreenZone™
- Modbus RTU
- I/O saving

The TTH-6040-W is a stylish temperature transmitter that is designed to measure the temperature in a room.

The TTH-6040-W is used in connection with ventilation, for example, for energy-saving night heating together with an air handling unit containing an OJ Air2 AHU control system.

The TTH-6040-W delivers the temperature digitally on Modbus RTU, and the measurement accuracy is not reduced by losses in cables or 0-10 V conversion in a subsequent system.

#### Energy-saving ventilation

When the fan has been stopped, the room temperature is measured much more precisely with the TTH-6040-W than with a temperature sensor that is built into an air duct or air handling unit. The energy-saving ventilation functions, such as night heating and summer night cooling, become significantly more efficient.


#### Plug & Play with OJ Air2 and OJ GreenZone™

The TTH-6040-W is fully integrated into the system's software, and the room temperature transmitter is detected fully automatically when it is correctly connected. The solution is "Plug & Play" with no complicated settings. It has never been easier to offer a room temperature sensor as an option.

#### I/O saving

The TTH-6040-W is connected with a Modbus connection. This saves an analogue temperature input and perhaps even an entire extension module in the associated control system.



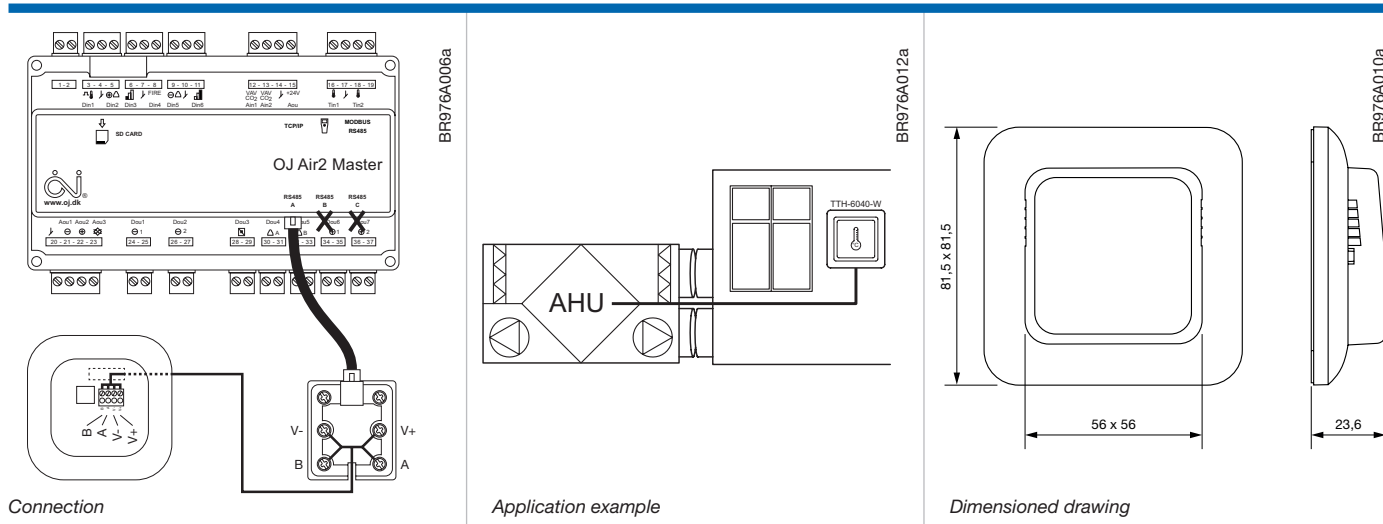

### Simple installation

The TTH-6040-W is connected to the OJ-Air2Master/OJ GreenZone™ with QuickPlug™ Modbus, eliminating time-consuming installation faults and troubleshooting. The Modbus communications are set up at the factory and ready for immediate use.

### Scope of delivery

The TTH-6040-W is delivered in a cardboard box containing:

- 1 x room temperature transmitter
- 1 x terminal box with RJ12 connectors
- 1 x QuickPlug™ cable, 3 m
- 2 x screws
- 1 x self-adhesive pad

### INSTALLATION

#### Installation of the transmitter

The TTH-6040-W should be installed on a flat surface approx. 1.5 m above the floor so that the air is able to circulate freely around it. Avoid placing in draughts and direct sunlight or in the vicinity of heat sources.

#### Cable connections

A 4-wire cable is connected in screw terminals and must max. be 1.5 mm<sup>2</sup>. There can be up to 30 m between the transmitter and the terminal box without special requirements being posed of the cable.

The terminal box is connected with the QuickPlug™ cable to the OJ-Air2Master RS485 port A or to an OJ Zone Module on the port Modbus sensor.

### PRODUCT PROGRAMME

| TYPE             | PRODUCT                       |
|------------------|-------------------------------|
| TTH-6040-W       | Room temperature transmitter  |
| OJ-Air2Master    | AHU controller                |
| OJ-ZoneModule-MP | OJ GreenZone™ Module MP bus   |
| OJ-ZoneModule-M  | OJ GreenZone™ Module Modbus   |
| OJ-ZoneModule-A  | OJ GreenZone™ Module Analogue |

### TECHNICAL DATA

|                            |   |
|----------------------------|---|
| Supply voltage             | 24 V DC ±15% via QuickPlug™                                   |
| Power consumption          | < 0.24 W  |
| Electrical connection      | max. 1.5 mm <sup>2</sup> , screw terminals                    |
| QuickPlug™ Modbus          | 1 x RJ12 (6P6C) in terminal box                               |
| Address selector           | 16 positions  |
| Temperature accuracy       | +/- 0.5 K @ 25°C  |
| Amb. operating temperature | -10/+40°C   |
| Dimensions                 | 86 x 86 x 25 mm, transmitter<br>58 x 52 x 21 mm, terminal box |
| Enclosure                  | IP20  |
| Weight                     | 60 g  |

### CE marking

The TTH-6040-W complies with the requirements in the following directives:

- EMC Directive
- EN 61000-6-2
- EN-61000-6-3