

# Example of setup of Email

User | Installer | Service | Factory | OJ Modules

Operating | Extended operat. | Temperature | Time & date | Alarm & log | About the control | Internet

IP address | **E-mail** | Login

### Set e-mail recipient

**E-mail configuration**

Enable sending of alarm e-mail

SMTP Server IP: 172.20.20.10

Server approval

Unit ID: Soldering - production

Sender: noreply@oj.dk

Recipient: jlu@oj.dk

Subject of email: AHU Error

Info in E-mail: AHU is placed on the roof.

Language: English

Save Test

```
ex Kommandoprompt
Microsoft Windows XP [version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

G:\>ping outlook.oj.dk

Pinger outlook.oj.dk [172.20.20.10] med 32 byte data:

Svar fra 172.20.20.10: byte=32 tid=1ms TTL=128
Svar fra 172.20.20.10: byte=32 tid<1ms TTL=128
Svar fra 172.20.20.10: byte=32 tid<1ms TTL=128
Svar fra 172.20.20.10: byte=32 tid<1ms TTL=128

Ping-statistikker for 172.20.20.10:
    Pakker: Sendt = 4, modtaget = 4, tabt = 0 (0% tab),
    Beregnet tid for rundtur i millisekunder:
        Minimum = 0ms, Maksimum = 1ms, Gennemsnitlig = 0ms

G:\>
```

Check if server approval is needed.

IP address of SMTP-mail server. In this case found by pinging the server.

Mail programs like Outlook needs to know who the sender of the mail. Use a address which indicates that the mail can't by replied. This address doesn't have to exist.

Recipient of the error message.

Language in which the error messages will be send.